

## FEATURES

### MANUAL POSITION

Used to send your GPS Position

Press the Manual Position button within the app, or tap your smartbutton once.

With 15 minute tracking, the app will automatically attempt to update your position every 15 minutes.

### TEXT ACTIVITY

This feature allows the user to log a timed activity via text rather than making a phone call.

Press the Text Activity button within the app and enter your Activity PIN number.

You will then be asked to input a timed duration in minutes. Following this, the user will also be able to enter details of their activity in the text box and then select 'Send Activity' to complete the process.

If you want to cancel or extend a current activity, you can do so by pressing the Text Activity button again. The user will get the option of selecting either the 'Extend Activity' or the 'Cancel Activity' button.


### TEXT ACTIVITY – WELFARE CHECK

This feature allows the user to receive a check-up message if you set an activity for 30 minutes or longer.

When the activity is set, the user will then receive the check-up message "Are you Okay?" at the timed interval selected.

If the user selects 'Yes' the activity will continue.

If the user selects 'No' or does not respond to the notification within 5 minutes, the activity will overrun. The system will call you and if you do not respond the system will raise an alarm to the ARC.

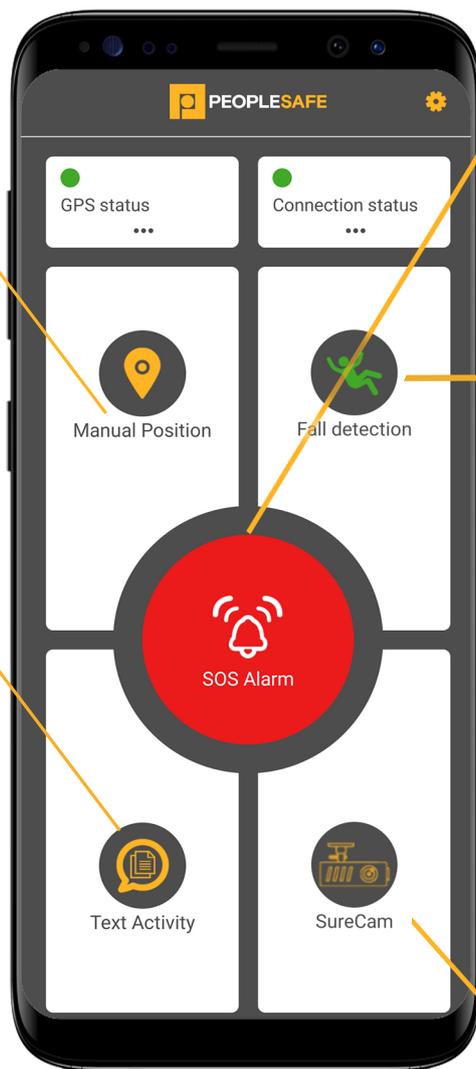

### SOS ALARM

In the event of an emergency, an alarm can be raised in two ways.

1. Within the app, press and hold the 'Alarm Now' button for at least three seconds.

2. Pressing the power button 8 times. (Android Only)

### FALL DETECTION

Select Fall Detection. The Fall Detection Menu will load. The green icon means that your Fall Detection is active.

There are four sensitivity options for the user's preference on the Fall Detection sensitivity. These are Lower, Low, Medium and High. Low is recommended for taller users and High for shorter users. Change these settings accordingly to ensure maximum accuracy when using Fall Detection.

Choose your setting and then press the 'Confirm' button.

Similarly, Fall Detection can also be deactivated by pressing the Fall Detection toggle, which will change the icon to red.

### SURECAM

The Peoplesafe App can be paired up to your vehicles SureCam dashcam for added safety when driving alone.

By activating this feature, any SOS alarm you send from your app will come through to our Alarm Receiving Centre (ARC) with live dashcam footage and the GPS location from your SureCam device, as well as information from your user profile and your smartphones GPS location.

This will enable our ARC Controllers to further assess the situation and contact the appropriate emergency services if required.

## ADD ONS IN THE SETTINGS MENU

### CHECK IN/ OUT

Use this feature to update your position and send a message to the Peoplesafe Portal.

If you have do not have an activity open and you select Check In, you will be asked if you want to log an activity as well.

If you have an activity open and you select Check In, you will be asked if you would like to extend your activity.

If you have an activity open and select Check Out, you will be asked if you would like to cancel your activity.